Disconnect power before repair. This repair should be made by a qualified Service Technician.

Wiring instructions – This single speed motor is designed to replace earlier versions with a different terminal block. The new wire harness supplied with motor will adapt to the machine harness. Most motors with this block will wire directly to the new harness. For models 132 and 132S see the below chart for wiring instructions.

When using the harness, place the sleeve over the female connectors on the machine harness. This will protect the connection from moisture and contact.

