

Installation Instructions for IG35 Range Igniter




WARNING! Electrical Shock Hazard

To avoid risk of electrical shock, personal injury or death; disconnect electrical power before servicing.



Parts Included in kit:

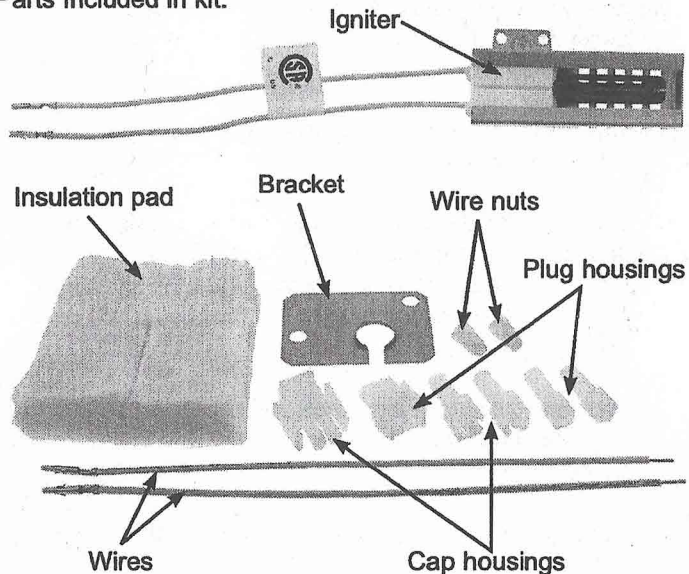

IS127 (3/18)

Installation Instructions for IG35 Range Igniter

Replacing long ceramic igniter with short ceramic igniter

1. Disconnect electrical power to the cooking appliance.
2. Replace long body ceramic igniter with short ceramic body. If you have a model equipped with mounting brackets different from the one supplied, retain any original mounting brackets for reuse.
3. Determine the lead length needed for making the new electrical connections.
4. Determine if the disconnected blocks are usable, if not, cut the disconnect block off and strip the wires 3/8" bare and cut the terminals on new igniter and strip wire 3/8" bare. Connect the new igniter to the harness leads using the furnished ceramic wire nuts.
5. Four different styles of housings are supplied, replace the same style in position on wire as was on old igniter being removed.
6. Attach new igniter to the burner. Route the leads away from the flame area.

IS127 (3/18)