

INSTALLATION INSTRUCTIONS for Replacement Ice Maker Circulation Pump WP2217220CM

This Kit Contains:

- Ice Maker Circulation Pump
- Instruction Sheet



Disconnect power before servicing.
Failure to do so can result in death or electrical shock.

Instructions

1. Remove all ice and drain water pan by removing drain cap.
2. Disconnect waterline and unplug ice maker.
3. Remove flip out chute and ice scoop bracket.
4. Remove water pan by removing thumb screws.
5. Remove single 1/4" head cap screw that holds plastic cover over pump.
6. Remove discharge hose from pump. Pull clear plastic 1/8" diameter water supply line from notch in left edge of pump base.
7. Remove three cap screws holding pump. Two are visible, the third one is behind the pump and requires an 8" extension on the socket. *See Figure 1*
11. Run a cleaning cycle with the ice machine cleaner recommended by the ice machine's manufacturer. At the end of cleaning cycle, drain the water tray. Place unit into service.

NOTE: Don't forget to clean regularly, if water supply is not chlorinated, molds and algae will develop in recirculation hose. Lack of frequent cleaning results in pump failure due to buildup from hard water mineral deposits.

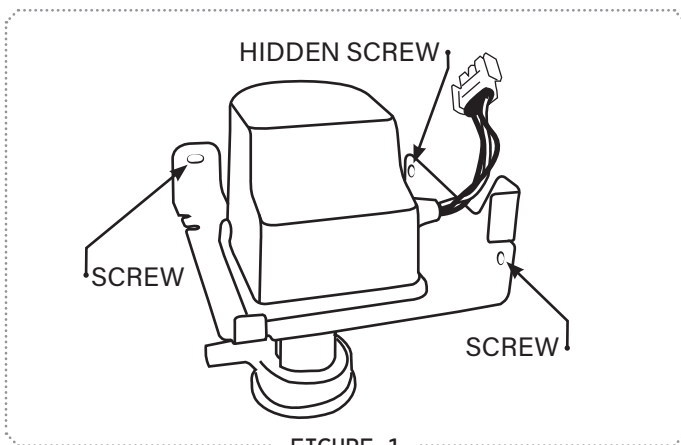


FIGURE 1

8. After the three screws are removed, the pump drops down. The electric connection must be unplugged. Pinch the tabs on either side to release the plug.
9. Reverse procedure to install the new pump.
10. After reinstalling the ice maker pump, clean thoroughly.