



INSTALLATION INSTRUCTIONS

Replacement for GR401- GR406
Round Range Igniter

Caution: Always turn off gas and electric power to appliance before servicing.

Fragile: Handle with care. Broken igniters caused by mishandling will not be warranted.


Warnings: Use this igniter to replace **ONLY** round style igniters manufactured by Carborundum/SIC. Do not use as replacement for flat Norton type igniters.

***** Do not attempt to modify this product. Any modification to this product will void the warranty*****

Instructions:

Note: In some cases, it will be necessary to remove oven racks, oven bottom plates, and some oven doors to access the igniter. Do not discard old brackets they may be needed also.

1. Remove the screws that hold the igniter to burner. (Do not discard brackets, they may be required on replacement igniter).
2. Cut and strip wire and connect to new igniter with wire connectors.
3. Attach new igniter in same manner as the one you are replacing.
4. Secure all screws and wire connections.
5. On models using hole reducer make sure it is inserted in wall or oven.
Do not install without hole reducer.
6. Cycle oven to make sure igniter works properly.

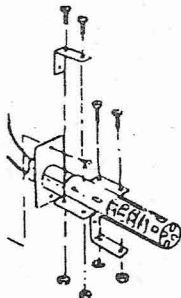

GR401 Brackets

IMPORTANT: Surface Igniter Corporation will not be responsible for injury or property damage resulting from service performed by a none qualified service technician. If you perform service on your own product, you must assume all responsibility for injury or damages, which may result.

Surface Igniter LLC
1709 Henry G Lane St.
Maryville, TN 37801

G7933