

Installation Instructions for P-Trap Drain Tube Kit

Kit Contents:
1 Instruction Sheet
1 Drain Spacer
1 P-Trap Drain Tube

6. Align p-trap drain tube with drain spacer. Push on the p-trap drain tube until it touches the roof of machine compartment. See Figure 3.

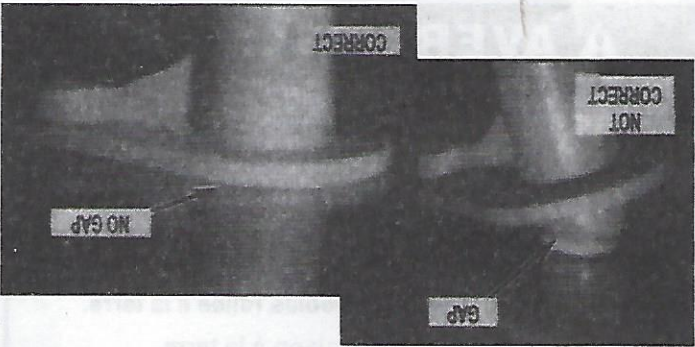


FIGURE 3

7. Final installation position. See Figure 4.

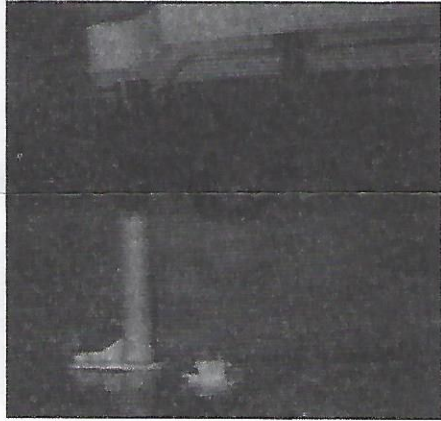


FIGURE 4

8. Replace all parts and panels.

⚠ WARNING

Electrical Shock Hazard

Disconnect power before servicing.
Replace all parts and panels before operating.
Failure to do so can result in death or electrical shock.

1. Unplug refrigerator or disconnect power.

2. Remove machine compartment cover.

3. Remove existing drain trough funnel, (if applicable) and duck bill grommet from the drain outlet and discard.

IMPORTANT: Be sure to remove any ice blockage/obstructions in the freezer behind the Evaporator cover and drain tube.

4. Assemble drain spacer to the drain outlet sticking out of freezer. Push it all the way to the machine compartment roof. See Figure 1.



FIGURE 1

5. Snap the p-trap drain tube to the drain pan. See Figure 2.

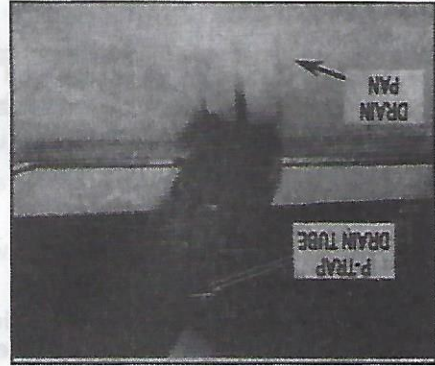


FIGURE 2

9. Plug in refrigerator or reconnect power.

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Electrical Shock Hazard



⚠ WARNING